


**(B) To connect your Digital Decoder to your Home Theater Equipment
(Digital Dolby Receiver - see notes below)**

Instructions :

1. Connect cable from wall to cable "IN" on your Digital Box.
2. Using RCA cables, connect your Digital Decoder Video and audio "OUT" to your VCR's video and audio "IN".
3. Using RCA cables, connect your VCR's audio and video "OUT" to your Audio/Video receiver audio and video "IN".
4. Using RCA cables, connect your DVD player's audio and video "OUT" to your Audio/Video receiver's audio and video "IN".
5. Connect one RCA cable from your Audio/Video receiver "VIDEO OUT" to your TV "VIDEO IN".
6. Connect a RCA cable between your Digital Decoder SPDIF to your Audio/Video receiver's digital input.

Special notes :

1. RCA cables are not supplied by COGECO, but you can get them at a local electronic store.
2. If you do not own a DVD player, skip step 4 of these instructions.
3. This configuration will only allow you to record programs from the channel you are going to watch. To record a program different from the one you are watching, consult *Configuration to allow recording digital channel while watching another channel (analog or digital)*.
4. When programs contain digital Dolby audio, the digital audio options must be selected on the Audio/Video receiver and the Digital Decoder's menu guide.

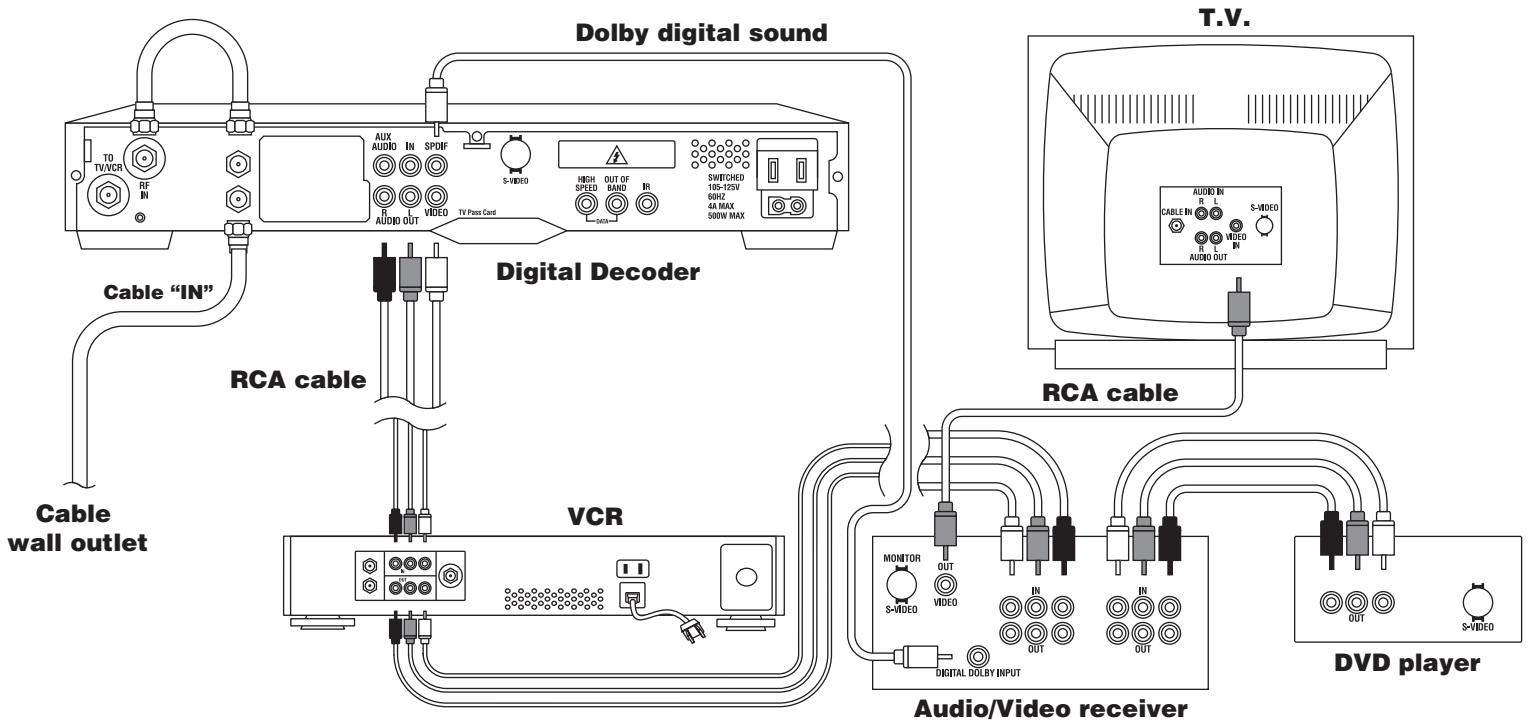

Your VCR and Video game system must be connected directly to your TV. This way you will avoid spoiling the quality of your Digital Decoder's signal.