

Cogeco TiVo® Service Remote Quick Guide



Get ready for the TiVo experience.

Ready for an out of this world TV experience? Press the TiVo® button on your remote control to get to the TiVo Central screen, the starting point for all of TiVo's amazing features.

The TiVo Remote

The **TiVo button** takes you to the TiVo Central screen, the starting point for all your TiVo features and settings.

If programmed, **TV PWR** turns your TV on or off.

Use **Input** to select the input (such as TiVo box, DVD player, game system) your TV displays.

Back goes back to the previous screen (in certain apps).

Guide takes you to the program guide where you can find shows to watch or record. Press it again to see filtered views.


If programmed, **Vol** and **Mute** control the volume on your TV or A/V receiver.

Play, Pause, Rewind, Fast Forward or play shows in **Slow Motion**. Press Rewind and Fast Forward up to three times for three speeds.

Replay repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

The **A, B, C,** and **D** buttons sort and filter views. Look for the on-screen tips.

Clear removes the display of the info banner or program guide, and deletes titles from the My Shows or To Do list.

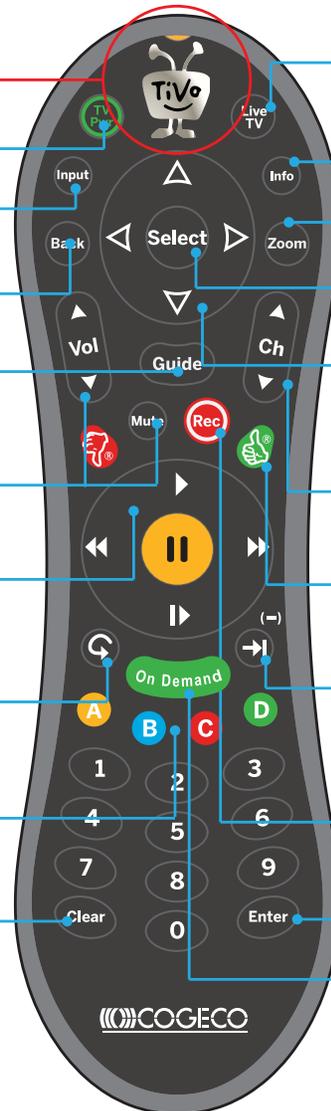

Live TV takes you to live TV. If you're watching live TV, use it to cycle through the tuners.

Info shows the info banner while watching live TV; press it again to make it disappear.

Use **Zoom** to change the aspect ratio of shows on your TV or to return to full screen from the video window.

Press **Select** to choose menu items, or when watching live TV, to bring up the Mini Guide.

Use the **arrow buttons** to navigate the TiVo menus and the program guide. When watching a recording, press the left arrow to stop the recording and return to the program information screen.

Use the **Ch Up/Down** buttons to change the channel and to page up or down while in the program guide or TiVo menus.

Use the **Thumbs Up** and **Thumbs Down** buttons to rate shows or collections for TiVo Suggestions.

Advance moves forward in 30-second increments; press and hold to jump to the end of the show. Or press Advance to jump to the next tick mark when fast forwarding or rewinding.

Press **Record** to record the show you're watching or to set up a recording for a show selected in the guide.

Enter/Last returns you to the last channel tuned to in live TV.

On Demand takes you to the Cogeco On Demand catalogue.

Remote control tips and shortcuts

Press the **TiVo®** button  once to go to the TiVo Central screen, or twice to **go to the My Shows list**—your list of recorded shows.

While watching live TV, press **Select**  to see the **mini-guide** for a snapshot of what's coming up on the next three channels.

Ch Up/Down  does more than change the channel—it also **pages up or down through lists** of shows or menu items.

Press **Advance**  to **move forward 30 seconds**. Press and hold to catch up to live TV or jump to the end of a recorded show.

Press **Replay**  to **jump back 8 seconds**. Press and hold to jump to the beginning of a show.

While watching a recording, press the **Left** arrow  to **stop the recording** and return to the program information screen.

Get where you want to go quickly! From the TiVo Central screen, press the following number buttons for these **shortcuts**:

- 1 OnePass Manager
- 2 To Do List
- 3 WishList Searches screen
- 4 Search
- 5 Browse TV & Movies
- 6 History
- 0 Surprise! Watch a TiVo cartoon.


Remote Control Troubleshooting

Press any button on the remote. Does the activity light above the TiVo button on the remote flash?

If the activity light does not flash, make sure the batteries are positioned correctly in the remote. If they are correctly positioned, try a new set of batteries.

If the activity light on the remote does flash, but the lights on the front of the TiVo box do not respond to the remote, restart your TiVo box by unplugging it, waiting 15 seconds, then plugging it back in.

Activity Light

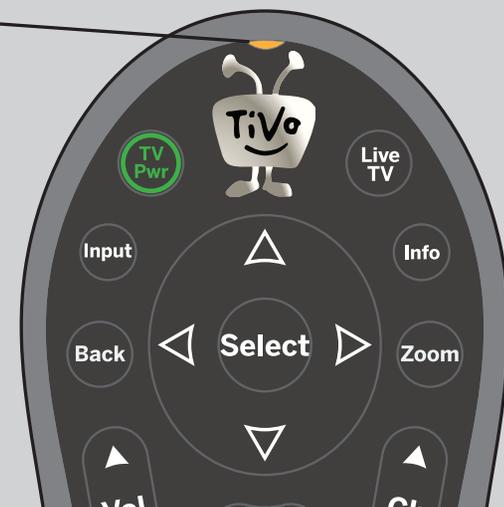

Customizing your TiVo remote

When programmed, the **TV Pwr**, **Input**, **Vol** and **Mute** buttons on the TiVo® remote can control your TV or A/V receiver.

Your TiVo DVR comes with an RF remote. This means that the remote can control your TiVo box even if the box is not in direct line of sight with the remote (for instance, if it is behind a cabinet door).

If you have trouble using the remote in RF mode, you may need to “pair” the remote with your TiVo DVR before using it.

To program or pair your TiVo remote, press the TiVo button to go to the TiVo Central screen and select ‘Messages & Settings,’ then ‘Settings,’ then ‘Remote, CableCARD, and Devices,’ then ‘Remote Control Setup.’ Follow the easy on-screen instructions.


For more information on this and many other features, go to cogeco.ca/support.



Using the on-screen menus

To navigate the on-screen menus, use the remote control's arrow buttons to move to the option you want, then press **Select**.

The **Left** arrow button often takes you to the previous screen.

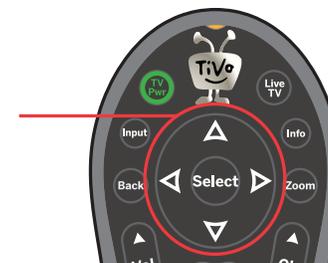

Got questions? Here's how you can always find answers:

- Find detailed instructions on how to use the many features of your TiVo DVR at cogeco.ca/support.
- Use the Help screens on your TiVo DVR.
Go to Settings & Messages > Help.
- Contact Cogeco Customer Service **1-855-933-6378**.

