


Connecting your Digital Decoder to your PICTURE IN PICTURE TV.

Instructions :

1. Connect the wall cable to the input of a 2-way splitter.
2. From one of the splitter's outputs, connect a cable that will be linked to your Digital decoder "IN".
3. From the second output of the splitter, connect a cable directly to the TV Cable "IN".
4. Using an S-Video cable, connect your digital decoder S-Video "OUT" to your TV S-video "IN".
5. Using RCA cables, connect your digital decoder video and audio "OUT" to your VCR video and audio "IN".
6. Select your VCR video input (if you need help, consult your VCR user guide).
7. Connect your VCR video and audio "OUT" to your TV video and audio "IN" connections.

Specials notes :

1. S-video and RCA cables are not supplied by COGECO, visit your local retailer to obtain these items.
2. To change the channels on your PICTURE IN PICTURE, use your TV remote control. To change channels on your main TV screen, use your Digital decoder's remote control.
3. If use multiple S-video inputs, we suggest that you set your TV to S-video mode.
4. Use the input functions on your TV to select between inputs (cable, video, S-video).

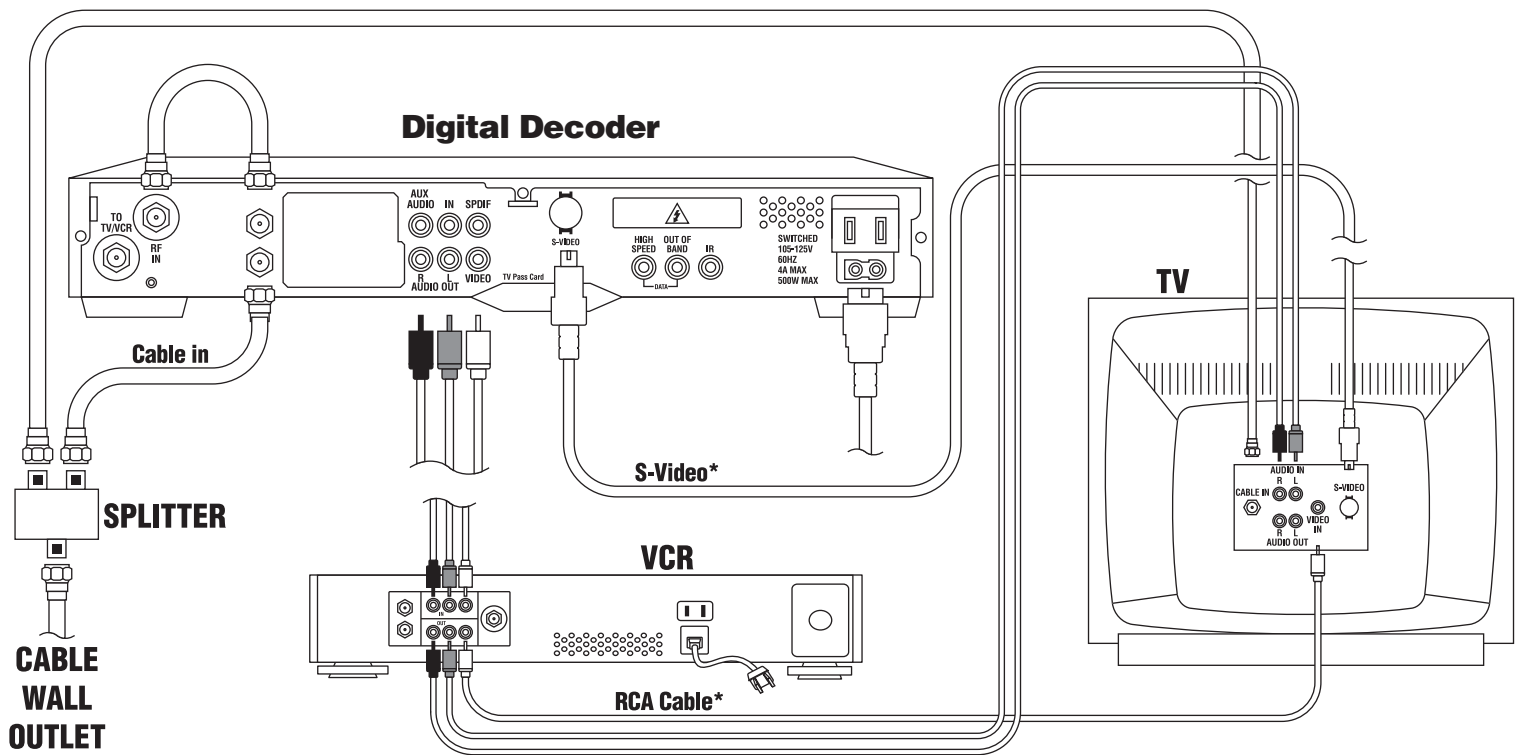

Your VCR and Video game system must be connected directly to your TV. This way you will avoid spoiling the quality of your Digital Decoder's signal.