

Replacing your Cogeco Standard Definition Receiver

1 Removing your old equipment

- Disconnect your existing digital receiver. Begin by unplugging the coax from the back of the receiver.
- Unplug the power supply from the electrical outlet and the back of the receiver.
- Unplug the cables connecting the receiver to the television.

2 Before connecting your HD or HD PVR receiver


In the space below, record the **serial number** and **U/A number** of your new digital receiver. You may require these numbers in the event where troubleshooting with technical support is needed. They are found **underneath** or **on the back of the receiver**.

Serial no. _____

U/A no. _____

3 Connecting your digital receiver


- Connect one of the supplied coaxial cables from your wall to the **CABLE/RF-IN** input of your digital receiver.
- Connect the new power supply from the digital receiver to an active wall power outlet.
- Connect the other supplied coaxial cable from the **TO TV/VCR (RF-OUT)** output of the digital receiver to the **CABLE/RF-IN** input of your TV. Alternatively, you may connect the RCA output of the digital receiver to the RCA input on your TV using your own RCA cable (not supplied by Cogeco).
- Note the name of the coaxial or RCA input on your TV that is connected to the digital receiver (ex.: VIDEO-1, TV/CABLE or ANTENNA). Input names may vary by TV. If required, check your TV manual for more information.

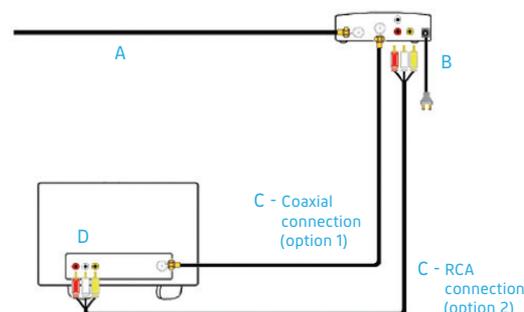

4 Activating your digital receiver

- Press the **INPUT** or **SOURCE** button on your TV's remote control and select the video input that connects your TV to your digital receiver (ex.: VIDEO-1, TV/CABLE or ANTENNA).
- After selecting the correct video and ensuring your TV input is set to channel 3 (if applicable), the receiver will automatically start the initialization process. This process could take up to 30 minutes.
- Your receiver will shutdown automatically following completion.
- Turn on your receiver by pressing the **CBL** button followed by the **PWR** button on your Cogeco remote control.
- Select channel 3 using your Cogeco remote control.
- Your receiver is activated if channel 3 displays programming on your TV screen.
- The programming guide and menus will be available within 1 hour following activation.
- Cogeco On Demand will be available as soon as you can access the programming guide and menus.
- If channel 3 is not displaying programming, disconnect the power cord and then reconnect the cord. If programming is still not being displayed, please contact technical support at **1-877-301-1210**.

5 Using your Cogeco remote

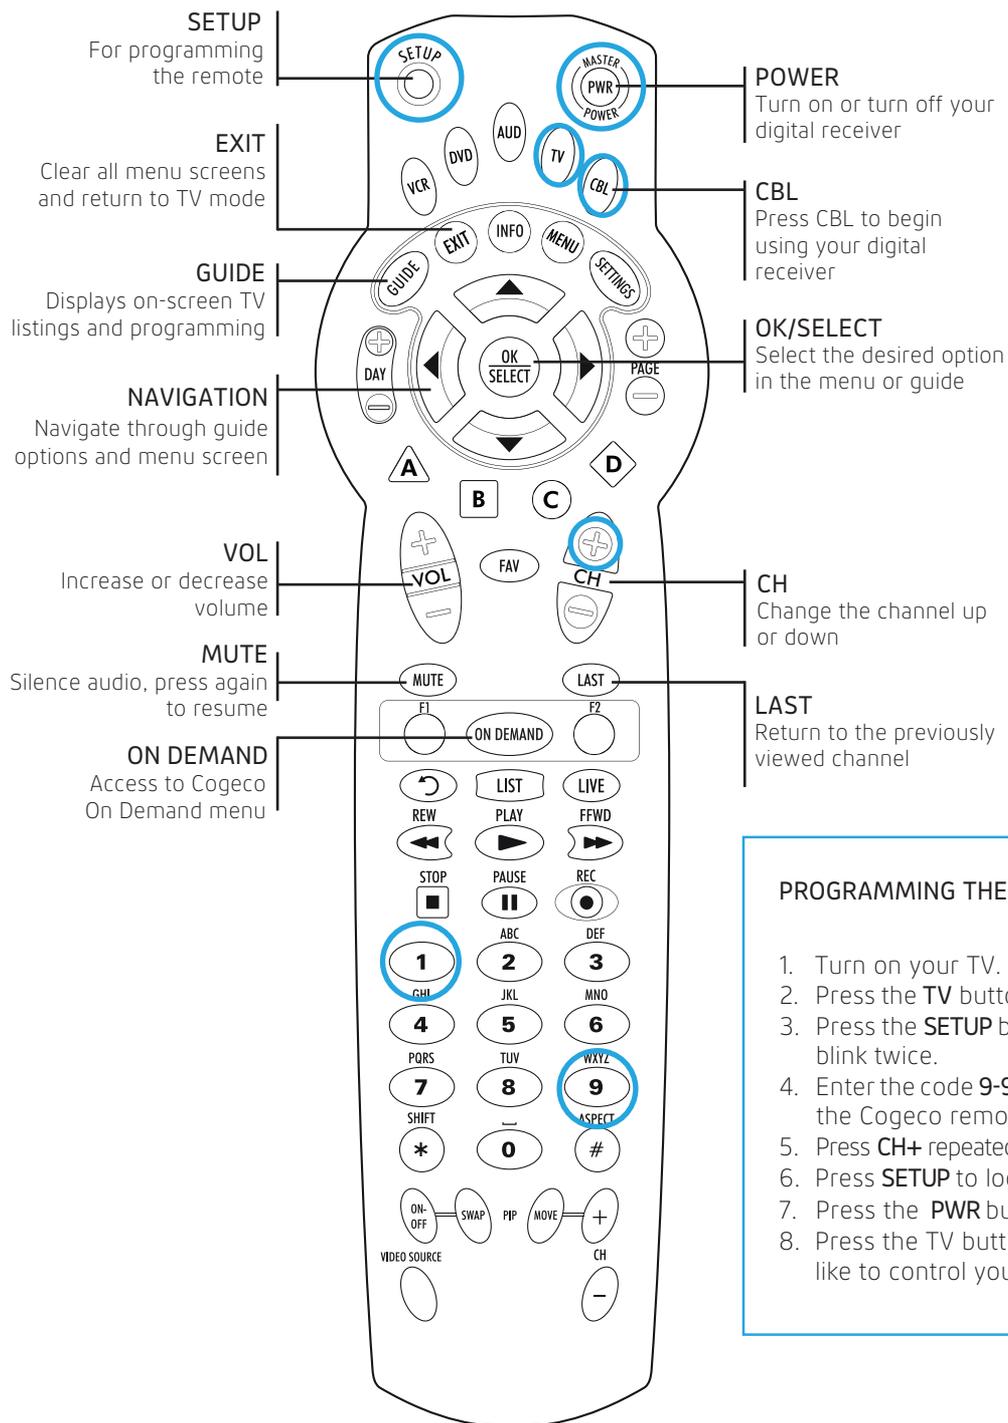

IMPORTANT NOTES

1. Always aim your remote control at your digital receiver.
2. To access other devices (ex.: DVD), be sure to choose the correct **INPUT** or **SOURCE** button on your TV's remote control. To access your TV receiver, select the video input that corresponds to your connection.

PROGRAMMING THE REMOTE WITH YOUR TV

1. Turn on your TV.
2. Press the **TV** button on the Cogeco remote.
3. Press the **SETUP** button. The **TV** button should blink twice.
4. Enter the code **9-9-1** using the number pad on the Cogeco remote.
5. Press **CH+** repeatedly until your TV turns off.
6. Press **SETUP** to lock the code.
7. Press the **PWR** button to turn on your TV.
8. Press the **TV** button first when you would like to control your TV using the Cogeco remote.

You may also activate your TV receiver and change your channel selection through Cogeco My Account. Visit cogeco.ca/myaccount for more details.

For more support information visit cogeco.ca/guideontario

